

Making Laminated Turning Blanks – by Bill Kloepping Apr 2012

The key to laminating blanks is PATIENCE. Rushing through one or more of the steps can ruin the blank(s)!

Materials needed:

- Wood blanks (typically 1, 2, or 4 pieces)
- Thin veneer (typically 1, 2, or 4 strips for each blank to be laminated)
- Wood glue and glue brush (Titebond III wood glue is suggested)
- Masking tape (1" wide is good – blue painters tape works well)

Tools needed:

- Band saw or scroll saw with a narrow, thin kerf, large number of teeth per inch blade
- Wood clamps (I recommend 3 – 6 screw type clamps per blank, not “quick clamps”)
- Wood chisel or utility knife

First, determine how many kinds of wood you want in the final blanks. I typically use 1, 2 or 4 woods. You will need 1 blank of each type of wood you wish to use. For multiple wood laminations I prefer that the woods have distinctive, contrasting colors.

To make the process easier when using multiple woods, all pieces should be identical in size to each other (height, width, and length) and be square (height = width and sides at 90 degrees).

Second, determine what laminate you want to use. I typically try to choose a veneer with a color that contrasts with all of the other woods being used so the veneer stands out separately from the other woods. Cut the laminate into strips (along the grain of the wood, not cross grain) so the strips are about the same width (or height) of the blanks and somewhat longer than the length of the blanks. For 3/4" x 3/4" x 5" blanks I'll cut the strips to approximately 3/4" wide and 6" long (individual strips can vary in size).

Helpful hint: An old flat bed paper cutter with a scissor type blade is an excellent tool to use for cutting most thin wood veneers.

The band saw or scroll saw blade kerf being used should be approximately the same thickness as the veneer being used. If the blade is a bit thicker or thinner than the veneer, the veneer lines may not be smooth curves (they may be shifted off a bit at intersections). This is a visual effect only and won't affect the quality of the laminations. Most of the veneers I use are in the 0.020"- 0.040" thickness range. For pen blanks, I use a #12 scroll saw blade, which has a 0.024" kerf. For larger blanks, I use a 3/16" or 1/4" band saw blade with a 0.025" thick kerf. The more teeth per inch on the blade, the smoother the cut will be. Using a blade with few TPI will result in a ragged cut which will be visible on the final turned piece.

If the blade is A LOT thinner or A LOT thicker than the veneer you are using, the blank will not glue back together into a square blank. This will complicate subsequent cuts but shouldn't affect the overall quality of the laminations as long as you **clamp the pieces tight enough to remove all gaps between the wood and veneer.**

Pictures illustrating a number of the steps and intermediate results described below are provided at the end of the descriptions and are referenced by the various steps.

Laminating Swirling Lines In A Single Wood Blank:

1. Make a smooth, curving cut along the length of the blank; cutting the blank into two pieces. Blow the excess sawdust from the cut surfaces but DO NOT SAND (pic 1).
2. Using a brush, completely coat both sides of the cut with glue and completely coat both sides of a veneer strip with glue (pic 4). If using multiple veneer strips, coat both sides of all veneer strips to be used (remember that the blade kerf and veneer must be about the same thickness).
3. Sandwich the glued veneer strip between the two pieces of the blank and clamp tightly, ensuring that all gaps are drawn together as tightly as possible (pic 6). It is not necessary to wipe off excess glue unless you want to (it gets trimmed off later).
4. Set aside until the glue has completely dried (I leave it to dry overnight).
5. After the glue has dried, trim the excess veneer and glue lumps from the blank (pic 8).
6. Repeat steps 1-5 for additional laminations. I usually make 2 cuts on each side of a blank, for a total of 4 cuts per blank.

7. When all laminations are completed and dry you can begin turning the blank.

NOTES:

There is no preferred technique or curve style. You may start at the end face or on a side close to an end. You can start and stop on the same side of the blank or cut from one side to the other. Cutting a nice 'hump' or two will help keep the pieces aligned better when clamping a stiff veneer between the pieces.

Don't cut extremely sharp curves. A sharp curve will be difficult to bend the veneer around without cracking the veneer; possibly resulting in gaps between the wood and the veneer. Gentle, smooth curves work best.

Don't worry if the veneer cracks when gluing/clamping. As long as the veneer doesn't separate into two or more pieces and you clamp the work tightly any cracks in the veneer shouldn't be noticeable on the final piece. If the veneer does separate into pieces it will be difficult to glue properly without leaving gaps or overlaps in the veneer. It is highly recommended that you use a different piece of veneer if one separates on you.

Use glue like someone else is paying for it! An unglued gap between wood and veneer will be a weak spot that can loosen and possibly chip out while you're turning the piece. If you have little or no glue squeeze out when you clamp the glued pieces and veneer together then you haven't used enough glue. That said, too much glue squeeze out is messy and wasteful. Still, using a bit too much glue is better than using too little.

A bad cut or severely mismatched veneer/blade thickness can result in gaps between the wood and veneer. Exerting **a lot** of pressure when clamping can close most gaps. Gaps on the outside are not of concern (they will get turned off). Gaps on the inside of a blank can be disastrous.

I usually let the glue dry overnight before cutting again. You can get by with a shorter dry time (depends on your glue) but you don't want to unclamp before the glue has set well.

Trimming the excess veneer from the blank is easily done with a sharp chisel (pic 8). You don't have to trim the blank back to square – just enough so subsequent cuts can be done easily. It's ok if you accidentally chisel into the blank a bit when trimming off the glue as long as the mistake is only in the part of the blank that will be turned off in the final piece.

The more cuts you make on a blank, the less square the blank will become. Don't worry if you end up with a gnarly looking blank when you're done – that's normal – the important issue is that the inside of the blank is tight, well glued and all gaps are closed.

The more cuts made on a blank and the more the cuts cross each other, the smaller the individual segments will be and the more complicated the final turned design will look.

Use sharp tools while turning to avoid tearing the veneer or small pieces from the blank.

I have had problems with glue joints failing when using friction finishes. High heat can adversely affect glue bonds especially with a cheaper glue. I had this problem with Elmers and Titebond II glue. I have not had a problem with this since switching to Titebond III (perhaps I've learned to control the heating/cooling better?).

Delamination (glue failure) often shows up during finishing as an area of the piece that was smooth suddenly begins to feel rough. This is typically where a small laminated segment starts to work out of the piece (glue failure). If not fixed immediately, the segment may continue to work out and possibly fly off. To fix a minor delamination, try prying the segment out a bit from the piece, squeeze CA glue underneath and around the segment, press it back in place and let it dry completely before continuing. If you can't pry it up, try soaking the area with thin CA glue and press the segment back down and let it dry completely before continuing.

Laminating Two Different Wood Blanks Together:

The same basic lamination steps listed above are used for laminating two different wood blanks together, however, there are a few additional steps added in.

1. Stack the blanks with the ends aligned evenly and tape both ends together tightly (like pic 10).
2. With the blanks stacked one on top of the other, make a smooth cut along the length of the stacked blanks. **It is EXTREMELY IMPORTANT that the blanks are kept vertical and the blade isn't bent or deformed (e.g. pushed sideways) during the cutting**

process. (This is where patience comes in !!!) Clamping the stacked blanks between L-shaped push blocks can help keep the blanks vertical and keep your fingers away from the blade during cutting (pic 1).

3. When the cut is complete, blow off excess sawdust from all pieces but do not sand.
4. Peel off the tape from both blanks, then swap the pieces between the blanks by taking a piece from one blank and matching it to the mating piece on the other blank (pic 3). If you made a good cut the pieces should mate well (small gaps are ok).
5. Take one of the mixed blanks and completely coat both sides of the cut faces with glue and completely coat both sides of a veneer strip with glue.
6. Sandwich the glued veneer strip between the two pieces of the blank and clamp tightly, ensuring all gaps are closed as tightly as possible (pic 6). Set aside to dry.
7. Repeat steps 5-6 to glue up the remaining (mixed) blank.
8. When both blanks are completely dried, trim the excess veneer and glue from them (pic 8). It is not necessary to trim them square but you should remove large glue bumps so the blanks can be stacked and taped tight again without them being able to wobble around much.
9. Restack the blanks, matching up the cuts made in step 2 (pic 9), so the blanks are on top of each other in the same orientation as they were when they were first cut, then tape both ends together tightly (pic 10).
10. Repeat steps 2 through 8 for the second lamination cut (the second cut should be different than the first cut and should intersect the first cut at multiple spots).
11. For the third cut, restack and align the blanks so the uncut faces are now on top of each other and tape both ends together tightly.
12. Repeat steps 2 through 10 to make the third and fourth lamination cuts.
13. When all laminations are completed and dry, you can begin turning the blanks.

NOTES:

All the notes for single blank laminations apply to laminating two different wood blanks together. In addition:

If the two blanks are not kept vertical during cutting, the pieces to be swapped will not be identical and they may not fit together well when the pieces are swapped. This will make it extremely difficult, if not impossible, to glue the pieces together without leaving significant gaps that may ruin the pieces.

Helpful hint: Clamping the stacked blanks between “L” shaped push blocks (pic 1) will help keep the blanks oriented vertically while cutting (highly recommended).

IMPORTANT NOTE: Use a sharp saw blade and be careful to push the blanks gently and straight into the blade. Do not try to push faster than the blade will cut. If you push the blanks sideways to the blade or try to cut too fast, the blade can bend or distort which will cause the blade (and the resultant cut) to be bent out of vertical. This will make gluing and clamping extremely difficult!

Helpful Hint: When cutting stacked blanks, I regularly relax my grip slightly on the blanks, allowing the blanks to realign with the blade and any deformation of the blade to straighten out.

After cutting and gluing the blanks a few times, the blanks may become so out of square that they will not tape together squarely or tightly without wobbling around as you cut them. If you keep the blanks clamped firmly between L-shaped push blocks (pic 1) and keep the push blocks square with the saw table, you can keep the blanks vertical enough during the cut to allow you to make a good, usable cut.

Orienting the blanks on the second and subsequent cuts can be extremely confusing if you try to think about it too much. There are MANY stacking combinations and blank orientations that can be made on the subsequent cuts. Although different combinations and orientations will produce different results in principle, in practice it is difficult to see much difference on the final turned pieces. Aligning the blanks with the first cuts on top of each other when making the second cut (also aligning the third cuts on top of each other when making the fourth cut) is easy to do (and remember) and reduces confusion (pic 9).

You might want to try different orientations on subsequent cuts to see how it changes the final result, however, unless you do A LOT of blanks and keep notes on what did what, it will be extremely difficult to reproduce an effect or even remember what you did from one time to the next (that’s the voice of experience talking...).

Helpful Hint: When using dark and light woods together, the sanding process can embed dark dust in the pores on the lighter wood. Blowing with compressed air prior to applying a finish can clear most of the dark dust from the light wood pores and result in a better looking final piece.

Laminating Four Different Wood Blanks Together:

Laminating four woods together is a minor twist on laminating two woods together.

1. Tape (any) two of the 4 blanks together to form one paired stack and tape the remaining two blanks together to form a second paired stack.
2. Make the first and second laminations in one of the two stacked pairs using steps 2-10 as given above in the two wood lamination section. Do the same for the second stacked pair.
3. Before making the third cut, swap blanks between the stacked pairs (pic 13) and rotate and tape the blanks so the uncut faces will be cut for the third and fourth cuts. (This is the key step)
4. Make the third and fourth laminating cuts on both stacks as indicated above in the two wood lamination section. When the last lamination is dry you can proceed to turn the pieces.

NOTES:

Explanation: After the first 2 cuts, each of the blanks in the first pair contain 2 woods and each of the blanks in the second pair contain 2 other (pic 12). By swapping a blank between the pairs before the third cut, each pair will have one blank containing 2 woods and one blank containing two other woods. After making the third and fourth laminations you end up with four blanks, each of which contain a mix of all 4 of the woods (pic 15).

All of the previous notes above for one and two wood lamination apply to laminating 4 woods. Additionally:

Intersecting cuts will “mix” the woods better than non-intersecting cuts. Intersecting the cuts a lot will give you smaller segments in the final piece. I make 2 cuts on each face, for a total of 4 cuts per blank, and usually cut the curves to make 3-6 intersections between cuts 1 and 2 and a similar number between cuts 3 and 4.

If you follow the above procedure using 4 woods (in particular, aligning the first and third cuts when making the second and fourth cuts), you will see that the final 4 blanks will look very different from each other (pic 15). All 4 long edges on a blank should be the same color wood and all 4 blanks will have different colors on the long edges. Additionally, the intersecting areas on the faces will show different color combinations as well. Also, if you start and stop the cuts on the side of the blanks instead of the end of the blanks, the ends of each of the 4 blanks will be different colors (one each for the original 4 colors of the blanks). Once turned, the final pieces will all look similar, however, you may be able to distinguish differences in how the colors are mixed between the 4 pieces (especially if the ends are different colors due to starting/stopping the cuts on the sides instead of ends). If you plan to turn paired items (e.g. pen/pencil sets), you might want to laminate 8 blanks (2 sets of 4 woods laminated together) so you can pair the blanks with similar final color combinations together.

To keep from getting the blanks confused during the laminating process and to help you in aligning the blanks for the 2nd and 4th cuts, you should label the individual blanks and also the orientation of the blanks.

In general, the above procedures will result in blanks with a good, reasonably uniform mixing of all 4 woods. Swapping and/or rotating the blanks differently will produce similar results but can be confusing when trying to determine how to align the blanks for each cut and/or result in an unbalanced mixing of the woods (e.g. more of one color on one side than on the other side of the final piece, etc. – which isn’t wrong, just different).

There is no “one way”... but as indicated above, PATIENCE is extremely important!

Some Notes About Laminating Without Using Veneer:

The purpose of using veneer between the cuts is two-fold. In addition to providing a contrasting color as a part of the overall design, functionally the veneer replaces the wood that is removed by the blade so the two pieces can be glued back together without leaving large gaps.

Consider if you cut a circular disk from the center of a board and then try to glue the disk back into the hole – you will have a gap between the board and the disk that needs to be filled – by glue or wood (veneer). The thicker the kerf of the blade, the larger the resulting gap will be.


Glue can fill small gaps where the pieces don't fit together well but glue cannot fully replace veneer when you are using a thick kerf blade.

By using an **extremely** thin blade (e.g. a # 0 scroll saw blade) you can reduce the gaps to a point where glue alone can be sufficient to fill the gaps, making the veneer unnecessary.


This can be useful if you are cutting extremely radical curves where bending veneer around the curves would be problematic (e.g. cammo design, small polka dots, etc.). This can also be useful if you wish to try dying the cuts and gluing them back together to give you extremely thin, delicate looking color lines in the final piece.

Caution: Cutting two stacked blanks with a # 0 scroll saw blade is extremely difficult as the blade can bend and distort very easily, making mating the swapped parts back together without noticeable gaps extremely problematic. Extreme patience is required when cutting with a thin blade but it can be done.

All of the above procedures can be done using no veneer if you carefully make the cuts with a # 0 scroll saw blade. Also, using colored glues can help mask or even be used to highlight the cut lines.

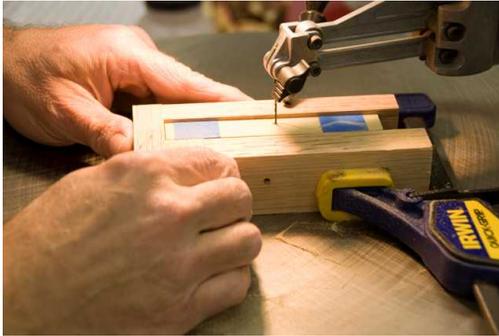

Pic 1: Cutting a curve using L-shaped push blocks

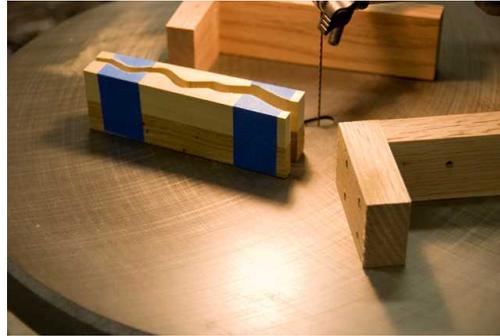

Pic 2: A cut stacked pair




Pic 3: Swapping parts from a cut pair



Pic 4: Glued veneer between swapped parts



Pic 5: Temporary clamp keep parts aligned

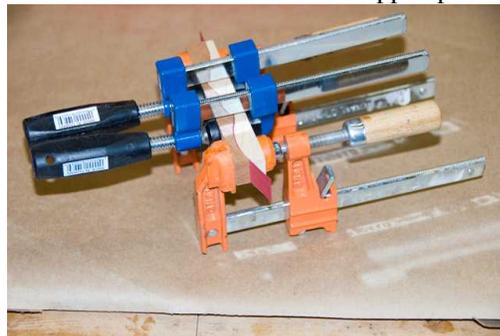

Pic 6: Glued and fully clamped blank



Pic 7: Dried blank ready to trim and cut



Pic 8: Trim off excess glue and veneer with a sharp chisel